

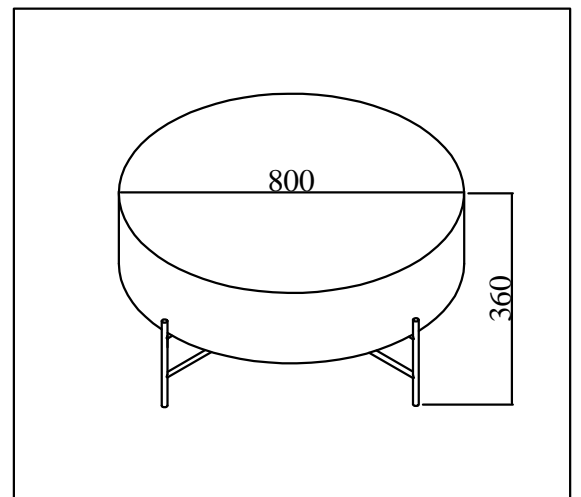
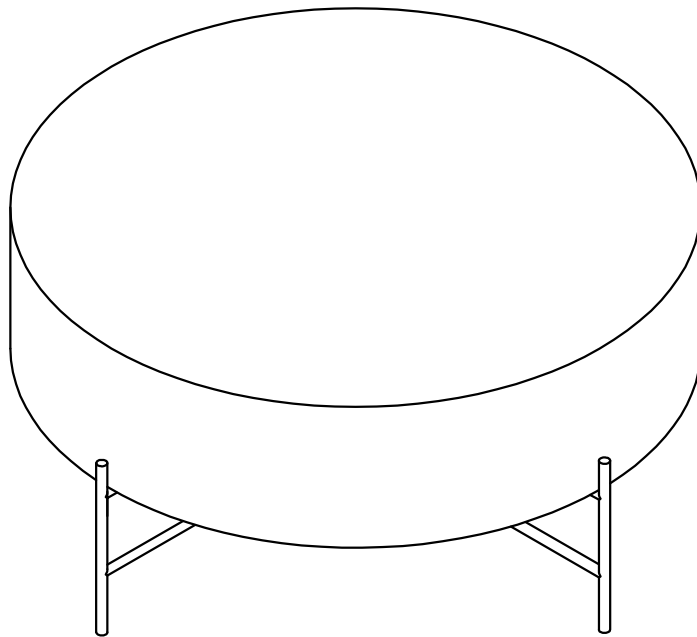


# Assembly instructions


Model: Brooklyn-ct

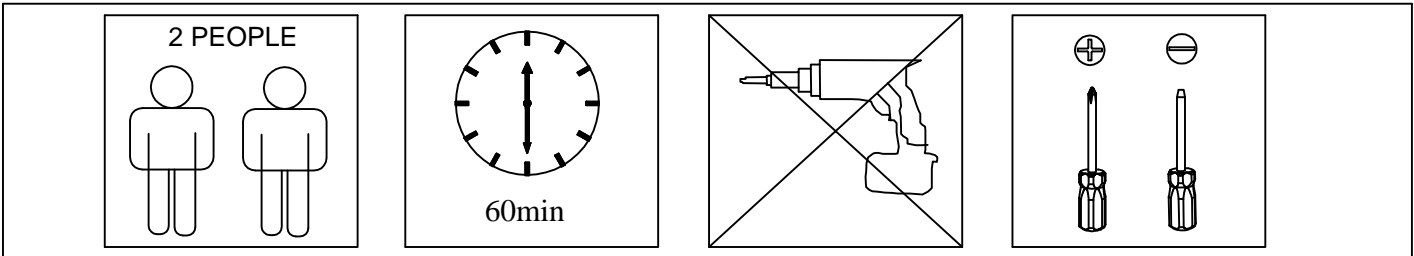


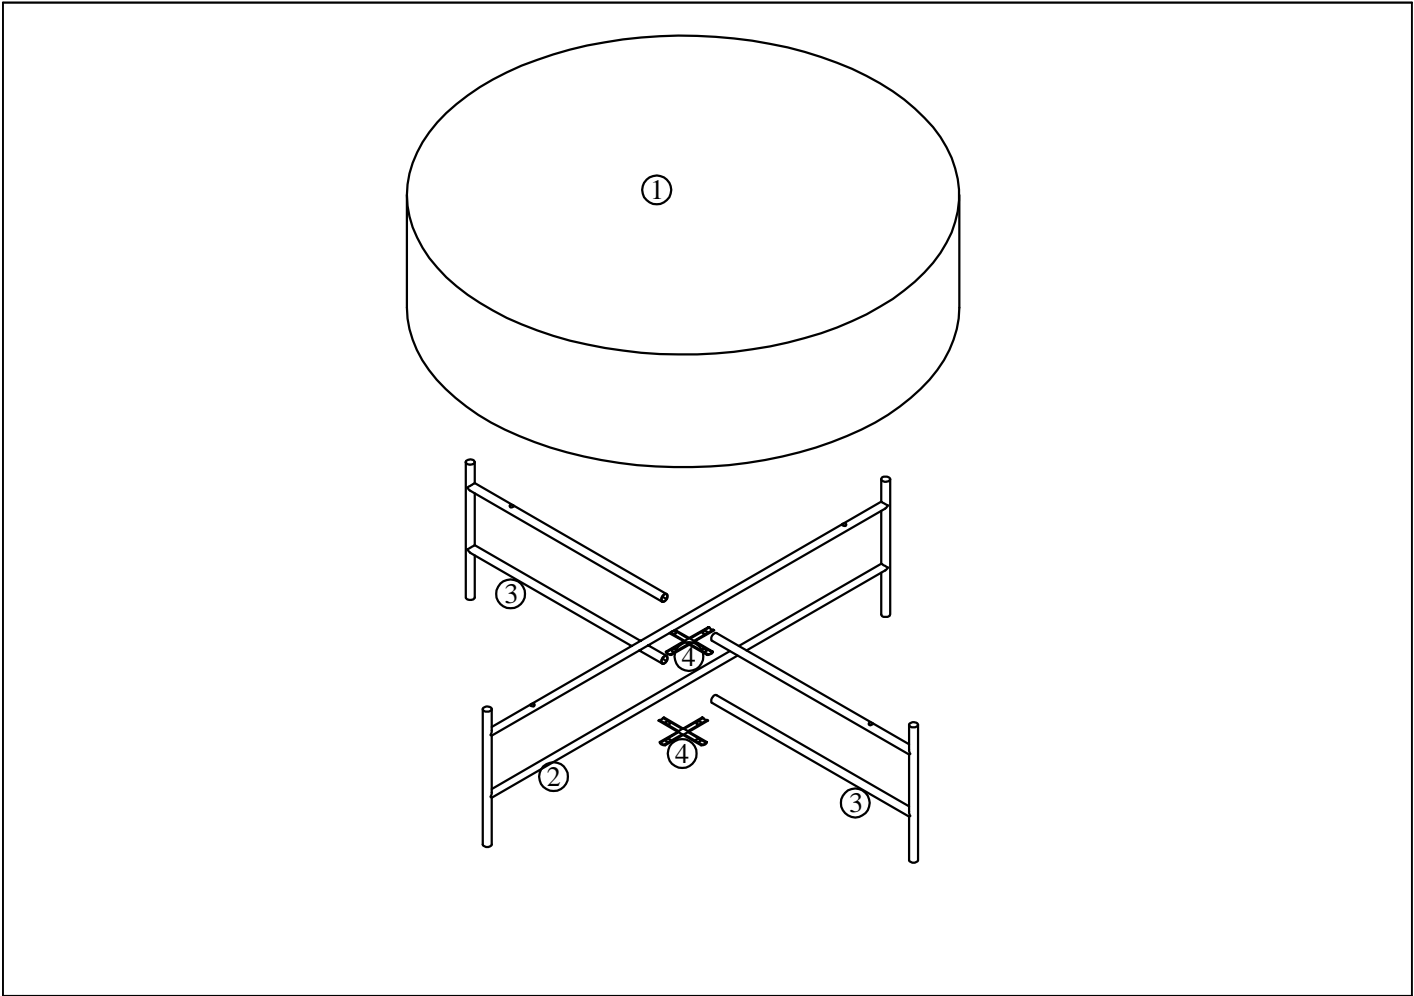


A	x8	B	x4	C	x1
M6x12mm		M6x30mm		D4	


# 1

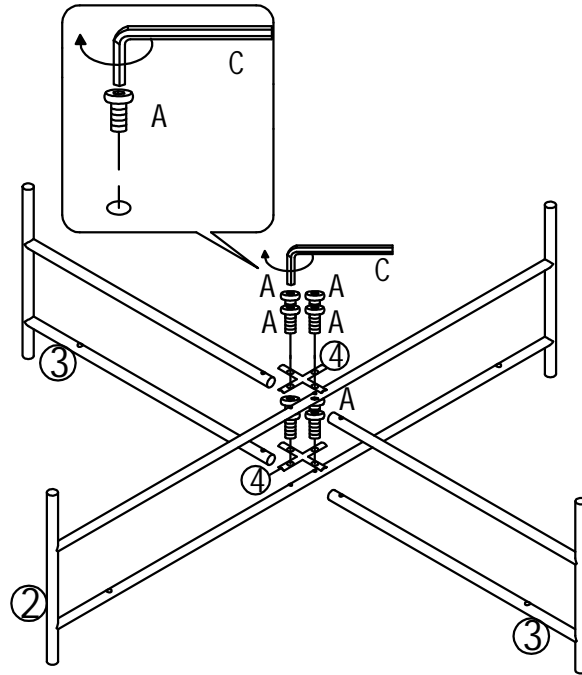



A	x8
	
M6x12mm	

C	x1
	
D4	
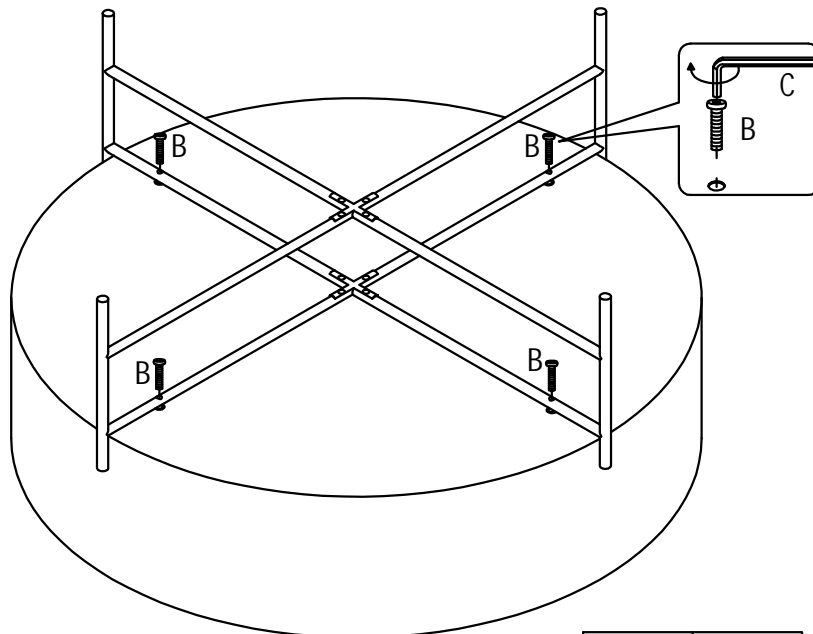
# 2



B	x4
	
M6x30mm	

C	x1
	
D4	